


FLUSH STAIR NOSE

Nosing — also called stair nosing, bull nose, stairwell trim, landing tread. Its thickness is the same as the flooring. Used to create a finished edge on top steps, around stairwells, sunken living room, etc.

Typical stair assembly layout is pictured below:

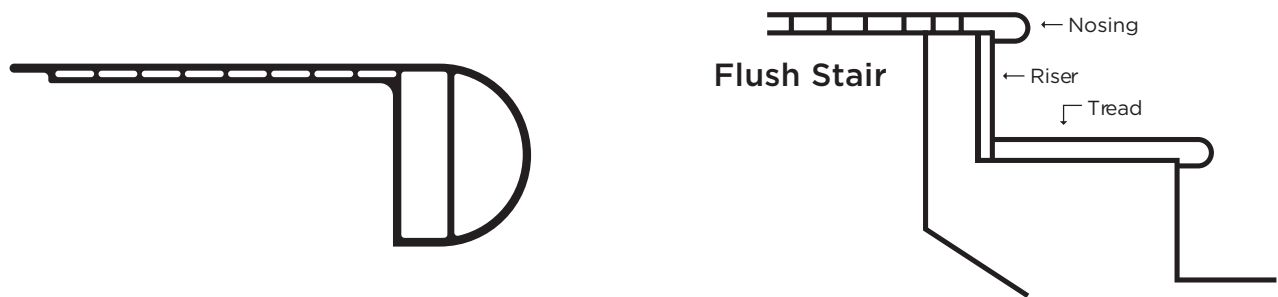

INSTALLATION STEPS: Flush Stair Nose

1. Measure and cut nosing to fit.
2. Dry fit the molding to ensure it is sized correctly.
3. Scuff/Abrade the underside of the nosing with coarse sandpaper.
4. Clean/Wipe the underside of the nosing with denatured alcohol and allow to dry.
5. Prep the substrate, remove any surface contaminants or moisture.
6. Apply a premium construction adhesive, such as Shaw TTT (Tread, Trim & Tackstrip) Adhesive, liberally in an "S" pattern.

7. Slowly insert the nosing, ensuring a flush fit to the stair edge and butt tightly against flooring.

**Note: If installing on a landing, that area of flooring should be direct glued. If installing adjacent to floating floors, the first row (or minimum 6" of flooring must be secured with a band of adhesive with the required perimeter spacing provided throughout the balance of the installation.*

Recommended adhesive when installing SPC or WPC floors with attached pad is T-180.

Recommended adhesive when installing Floorté products is TTT.

8. Apply direct pressure and secure with weights/sandbags (and/or) pre-drill and insert finish nails to secure the molding.
9. Fill nail holes with a colored filler/sealant.

QUARTER ROUND

Quarter Round finishes the perimeter of the floor. Please note the Quarter Round should be affixed to the vertical surface and not to the flooring itself.

Measure and trim to fit. Affix molding using adhesive (we recommend Shaw TTT adhesive), screws or nails. Follow adhesive manufacturer's instructions completely.

T-MOLDING

T-Molding transitions different types of flooring of the same height. For example, vinyl to vinyl.

Cut T-molding and track to same desired length. Secure track to floor with glue (we recommend Shaw TTT adhesive), molding tape or nails. Press or tap T-molding into track to desired depth using a rubber mallet.

BABY THRESHOLD

Baby Threshold is used to transition between flooring and doorway thresholds and/or around hearths and sliding glass doors.

Measure and trim to fit. Affix molding using adhesive (we recommend Shaw TTT adhesive), screws or nails. Follow adhesive manufacturer's instructions completely.

MULTI-PURPOSE REDUCER (MPR)

This is used to transition from a higher-profile floor to a lower-profile floor.

Cut MPR and track to same desired length. Secure track to floor with glue (we recommend Shaw TTT adhesive), molding tape or nails. Press or tap MPR into track to desired depth using a rubber mallet.

STAIR NOSE

This is used when installing vinyl on stairs, providing a capped edge and finishing touch on the stair edge.

Measure and trim to fit. Affix molding to stair edge using adhesive (we recommend Shaw TTT adhesive). Follow adhesive manufacturer's instructions completely.

STAIR TREAD

An alternative to traditional stair nose — Treads are a single-piece. This makes the installation process faster.

Measure and trim to fit. Includes cap for right- or left-side installation. Follow adhesive (we recommend Shaw TTT adhesive) manufacturer's instructions completely.